Manualslib.com - The Global Manuals Library

RCA L26WD26D - LCD HDTV W/ DVD PLAYER QUICK START MANUAL

Table of Contents

choose your connections
Connect a Signal Source
Set Up Your TV/DVD
Operate Your TV/DVD
Using the DVD Player
Using the Menu System
Watching TV
Changing Channels
Entering Channel Numbers
Changing Screen Formats
Viewing Devices Connected to Your TV/DVD
Other ManualsLib Projects

QUICK START GUIDE

RCA

www.rca.com/television

Choose Your Connections

Make your connection decision easier by taking a few minutes to review the jacks on your new TV/DVD. Compare the jacks on the device you want to connect and see if the same jacks are available on your TV/DVD. Then refer to the chart below to determine the best connection to make.

For more information about connecting your TV/DVD to other devices, refer to Chapter 1 of the User's Guide. Make sure you read the provided safety information before you connect and operate your TV/DVD.

Jacks	Quality	Connects to...	Cables needed (not included)
	★★★★	Devices with an HDMI™ or a DVI output, such as Satellite Receivers and Cable Boxes	HDMI Or if connecting to a DVI device, use these with an HDMI cable Audio + DVI Adapter
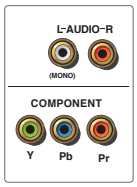	★★★	Devices with Y Pb Pr (component) outputs, such as Satellite Receivers, Cable Boxes, PVRs, and DVD Players	 Audio  Component Video
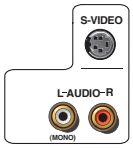	★★	Devices with S-Video or Video (composite) outputs, such as DVD Players, VCRs, Satellite Receivers, and Cable Boxes	S-Video  Audio
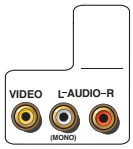	★		 Audio Video

1 Connect a Signal Source

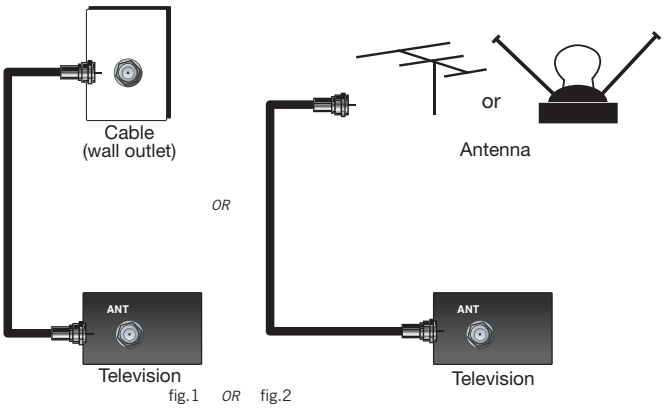

fig.1 *OR* fig.2

Connect your TV/DVD to cable or an antenna in order to receive TV channels. Connect the cables as shown in fig.1 or fig.2.

> *Note: If you have regular cable, your TV is able to receive some digital channels because it has a capability called QAM. QAM is a tuner that enables reception of unscrambled digital cable content. Check with your cable provider for information about content availability in your area. Refer to Step 3, Operate Your TV/DVD, for information on viewing digital channels.*

If you're connecting a cable box or satellite receiver use the chart above to help determine which jacks to use for the best connection. Your cable box or satellite receiver needs to be high definition if you want to receive high definition programming. Check with your cable provider for more information.

Continue to Step 2, *Set Up Your TV/DVD*, on the back page.

For your convenience, a copy of your User's Manual can be downloaded from www.rca.com/television.

RCA and associated marks are trademarks of THOMSON S.A. used under license to TTE Corporation.
HDMI, the HDMI logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.
Windows Media™ is a trademark of Microsoft Corporation.

2 Set Up Your TV/DVD

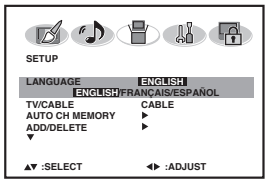

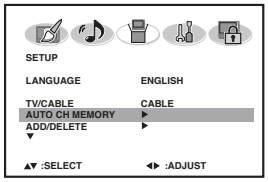

Make sure you have already connected your TV/DVD to devices and a signal source, plugged in the TV/DVD, and put batteries in the remote.

Now, turn on the TV and start the setup.

• **Set the Menu Language.** Press the SETUP/TV MENU button to display the setup menu. With the SETUP icon highlighted, press the down arrow button.

If English is your preferred language, press the down arrow button to continue to the next step. To choose another language, press the right arrow button until that language is highlighted, and press the down arrow button to continue.

• **Choose the Signal Source.** If you connected Cable to your ANT jack, the option is chosen for you and you can press the down arrow button to continue. If you connected an antenna to your ANT jack, press the right arrow button to choose *TV* and then press the down arrow button to continue.

• **Complete the Channel Search.** With *Auto Ch Memory* highlighted, press the right arrow button to begin the channel search. The search takes some time as it is looking for analog and digital channels, and digital sub channels. Once the search is complete, the TV tunes to a channel.

3 Operate Your TV/DVD

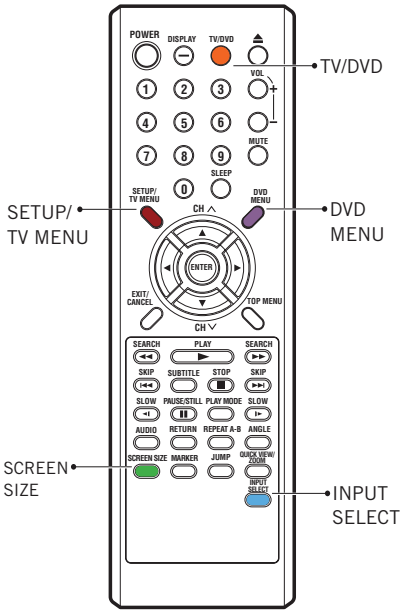

Using the DVD Player

To use the DVD player, press the **TV/DVD** button (DVD appears at the bottom of the screen). Insert a disc into the side slot load with disc's label facing towards you. If necessary, press the PLAY button to play the disc. To switch back to TV mode, press the TV/DVD button.

The DVD player can play DVD discs, DVD-R/RW (video format only), Audio CD discs, CD-R/RW discs with mp3, Windows Media-formatted content, and JPEG files.

Using the Menu System

The **SETUP/TV MENU** button accesses both the DVD player's main menu and TV's menu. To access the DVD player's main menu, while a disc is playing first press the STOP button and then press SETUP/TV MENU. Use the up or down arrow buttons to scroll up or down; left or right arrow buttons to scroll left or right; and ENTER to make selections.

A disc is capable of having an on-screen menu that is separate from the DVD player's main menu. The disc menu might only contain a list of the titles and chapters, or it may allow you to change features such as language and playback settings. To access the disc menu, press the **DVD MENU** button.

Watching TV

Changing Channels

If you have both analog and digital cable channels these are put into the same channel list. When you change channels, look for *ANALOG* at the bottom of the screen to see if you're viewing an analog channel; look for *DIGITAL* to see if you're viewing a digital channel.

Entering Channel Numbers

Digital channels can have both primary channels (like the analog channel number) and sub channels. If 6 is the primary channel and 1 is the sub channel, for example, the channel looks like *6.1* or *6-1* on screen. To tune to a digital channel with a sub channel, such as 6.1, enter the primary channel number (6), then press the **DISPLAY -** button. Enter the sub channel number (1) and press ENTER.

Changing Screen Formats

Your TV allows you to change the format of the picture you're viewing by pressing the **SCREEN SIZE** button on your remote. Depending on the type of signal you're viewing, you might not be able to change the format.

Viewing Devices Connected to Your TV/DVD

To view devices connected to your TV/DVD, first make sure you are in TV mode. Press the **INPUT SELECT** button to display the input list. Choose the input name that matches the input where you connected the device. Your choices are *ANT, VIDEO1, VIDEO2, COMPONENT, HDMI, HDMI 2* (only available for model L32WD26D) and *PC*.

Thank you for your purchase. Before making a trip back to the retailer, please visit www.rca.com/television for more information or contact us at 1-800-336-1900 so that we may assist you in operating the unit, replacing missing parts, and ensuring your satisfaction with the product.

Other ManualsLib Projects

www.manualslib.com

www.manualslib.de

www.manualslib.es

www.manualslib.fr

www.manualslib.nl

www.manualslib.mx

www.manualslib.tech 30+ Languages